


IR Remote Controller: IR model:SW-5588A

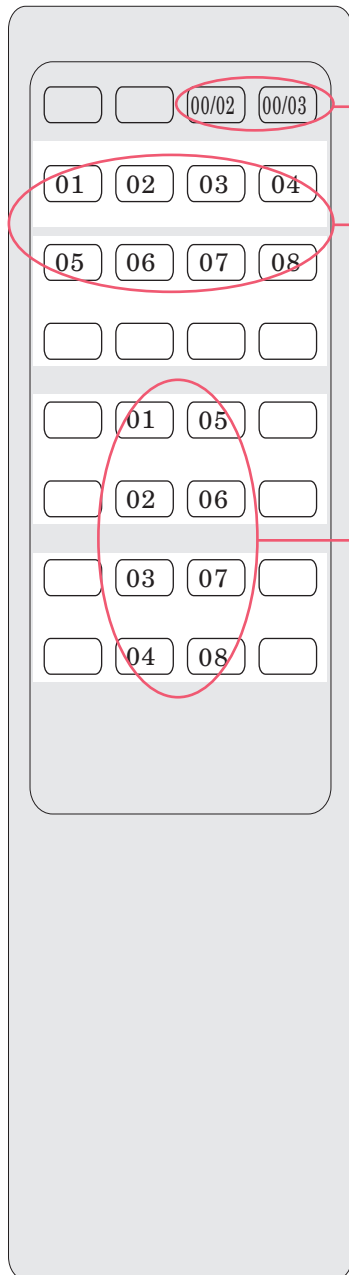

Custom Code : 00FF
Power on data code : 00FF/02FD
Power off data code: 00FF/03FC

**IR internal switching,
 nontransmitting**

Data code

For TV-1 to be sent AV-5

Follow these steps:

1. Press "TV-1" key (IR internal switch)
2. Next press "AV-5"key and
 IR will transmit data code 01FE/15EA

Press "AV-6" key and
 IR will transmit data code 01FE/16E9

Press "AV-7" key and
 IR will transmit data code 01FE/ 17E8

Press "AV-8" key and
 IR will transmit data code 01FE/ 18E7

For TV-3 to be sent AV-1

Follow these steps:

1. Press "TV-3" key (IR internal switch)
2. Next press "AV-1"key and
 IR will transmit data code 03FC/11EE

Press "AV-2" key and
 IR will transmit data code 03FC/12ED

Press "AV-3" key and
 IR will transmit data code 03FC/13EC

Press "AV-4" key and
 IR will transmit data code 03FC/14EB

Switable for SB-5588

00FF/02FD 00FF/03FC

