


SB-4184遙控器

IR CODE LIST : SW-4184

Application : SB-4184

Custom Code :00FF

DATA CODE

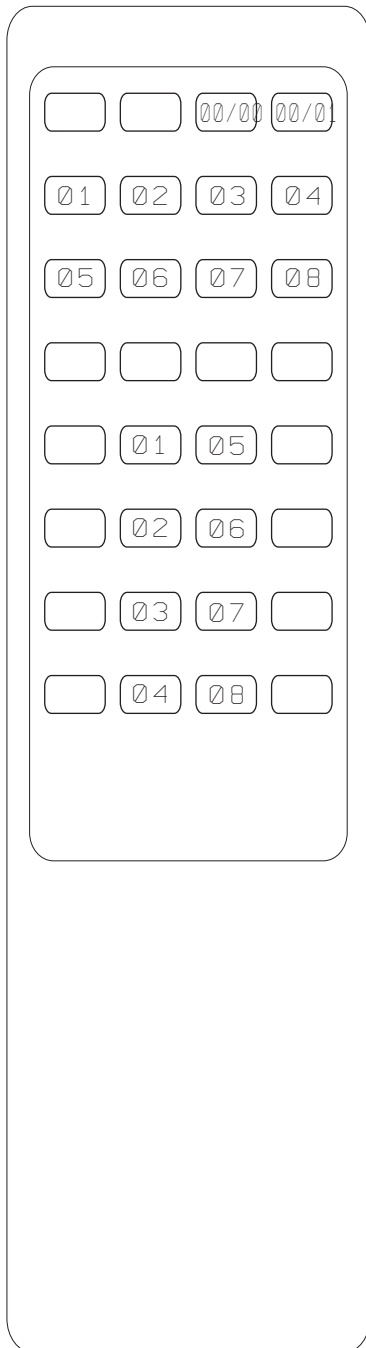

POWER ON :00FF 06F9
POWER OFF :00FF 07F8

OUTPUT#1 / INPUT#1 :0AF5 01FE
OUTPUT#1 / INPUT#2 :0AF5 02FD
OUTPUT#1 / INPUT#3 :0AF5 03FC
OUTPUT#1 / INPUT#4 :0AF5 04FB
OUTPUT#1 / INPUT#5 :0AF5 05FA
OUTPUT#1 / INPUT#6 :0AF5 06F9
OUTPUT#1 / INPUT#7 :0AF5 07F8
OUTPUT#1 / INPUT#8 :0AF5 08F7

OUTPUT#2 / INPUT#1 :0BF4 01FE
OUTPUT#2 / INPUT#2 :0BF4 02FD
OUTPUT#2 / INPUT#3 :0BF4 03FC
OUTPUT#2 / INPUT#4 :0BF4 04FB
OUTPUT#2 / INPUT#5 :0BF4 05FA
OUTPUT#2 / INPUT#6 :0BF4 06F9
OUTPUT#2 / INPUT#7 :0BF4 07F8
OUTPUT#2 / INPUT#8 :0BF4 08F7

OUTPUT#3 / INPUT#1 :0CF3 01FE
OUTPUT#3 / INPUT#2 :0CF3 02FD
OUTPUT#3 / INPUT#3 :0CF3 03FC
OUTPUT#3 / INPUT#4 :0CF3 04FB
OUTPUT#3 / INPUT#5 :0CF3 05FA
OUTPUT#3 / INPUT#6 :0CF3 06F9
OUTPUT#3 / INPUT#7 :0CF3 07F8
OUTPUT#3 / INPUT#8 :0CF3 08F7

OUTPUT#4 / INPUT#1 :0DF2 01FE
OUTPUT#4 / INPUT#2 :0DF2 02FD
OUTPUT#4 / INPUT#3 :0DF2 03FC
OUTPUT#4 / INPUT#4 :0DF2 04FB
OUTPUT#4 / INPUT#5 :0DF2 05FA
OUTPUT#4 / INPUT#6 :0DF2 06F9
OUTPUT#4 / INPUT#7 :0DF2 07F8
OUTPUT#4 / INPUT#8 :0DF2 08F7