


REMOTE CONTROL

Before making any connections to the switcher. Observe the following:

- > Ensure the mains voltage supply matches the label on the supplied plug-Pack (+/- 10%)
- > Ensure that the power switch is OFF
- > Ensure that all system grounds (earth) are connected to a common point.
- > Avoid powering equipment within a system from multiple power sources that may be separated by large distances
- > Connect all audio video sources and destination equipment
- > power up all source and destination audio-visual sources
- > For each destination output select the appropriate input source by using The front panel input 1~8 select buttons. The supplied IR remote control. Or through the RS 232 serial communications port.
- > Upon power up the switcher will return to its last used setting before Powered down.

REMOTE CONTROL

IR REMOTE : SW-5688

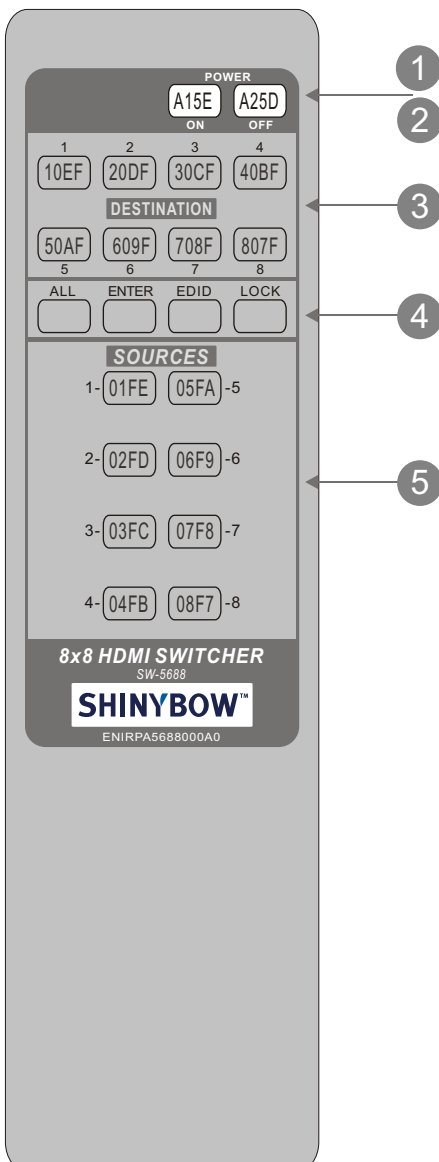

IR REMOTE CONTROL KEY :

- 1 2 SWITCH POWER ON or OFF
Controller with a separate power ON and OFF
- 3 DESTINATION : 1 thru 8 OUTPUT SELECTION
Press the destination button to select the output display channel.
- 4 FUNCTION KEY
ALL - function selection button
ENTER - function selection button
EDID - function selection button
LOCK - function selection button
- 5 SOURCE : 1 thru 8 INPUT SOURCE SELECTION
Press input 1~8 sources with selection button

REMOTE CONTROL

IR REMOTE CUSTOM AND DATA CODES (NEC Standard)

HOW TO SETUP IR CODES :

CUSTOM CODE : 09F6

POWER ON : 09F6 A15E

POWER OFF : 09F6 A25D

ALL : 09F6 B04F

ENTER : 09F6 B34C

EDID : 09F6 B748

LOCK : 09F6 B54A

PRESS DESTINATION - # then PRESS SOURCE -

DESTINATION #1 : 09F6 10EF

DESTINATION #2 : 09F6 20DF

DESTINATION #3 : 09F6 30CF

DESTINATION #4 : 09F6 40BF

DESTINATION #5 : 09F6 50AF

DESTINATION #6 : 09F6 609F

DESTINATION #7 : 09F6 708F

DESTINATION #8 : 09F6 807F

SOURCE #1 : 09F6 01FE

SOURCE #2 : 09F6 02FD

SOURCE #3 : 09F6 03FC

SOURCE #4 : 09F6 04FB

SOURCE #5 : 09F6 05FA

SOURCE #6 : 09F6 06F9

SOURCE #7 : 09F6 07F8

SOURCE #8 : 09F6 08F7