

# IR HEX Commands for SB-8188


INPUT :FORM DVD

OUTPUT:TO Monitor

Custom code:00FF

ON:00FF/04FB OFF:00FF/05FA	INPUT#3 / OUPUT#1: 03FC/31CE	INPUT#5 / OUPUT#1: 05FA/31CE	INPUT#7 / OUPUT#1: 07F8/31CE
INPUT#1 / OUPUT#1: 01FE/31CE	INPUT#3 / OUPUT#2: 03FC/32CD	INPUT#5 / OUPUT#2: 05FA/32CD	INPUT#7 / OUPUT#2: 07F8/32CD
INPUT#1 / OUPUT#2: 01FE/32CD	INPUT#3 / OUPUT#3: 03FC/33CC	INPUT#5 / OUPUT#3: 05FA/33CC	INPUT#7 / OUPUT#3: 07F8/33CC
INPUT#1 / OUPUT#3: 01FE/33CC	INPUT#3 / OUPUT#4: 03FC/34CB	INPUT#5 / OUPUT#4: 05FA/34CB	INPUT#7 / OUPUT#4: 07F8/34CB
INPUT#1 / OUPUT#4: 01FE/34CB	INPUT#3 / OUPUT#5: 03FC/35CA	INPUT#5 / OUPUT#5: 05FA/35CA	INPUT#7 / OUPUT#5: 07F8/35CA
INPUT#1 / OUPUT#5: 01FE/35CA	INPUT#3 / OUPUT#6: 03FC/36C9	INPUT#5 / OUPUT#6: 05FA/36C9	INPUT#7 / OUPUT#6: 07F8/36C9
INPUT#1 / OUPUT#6: 01FE/36C9	INPUT#3 / OUPUT#7: 03FC/37C8	INPUT#5 / OUPUT#7: 05FA/37C8	INPUT#7 / OUPUT#7: 07F8/37C8
INPUT#1 / OUPUT#7: 01FE/37C8	INPUT#3 / OUPUT#8: 03FC/38C7	INPUT#5 / OUPUT#8: 05FA/38C7	INPUT#7 / OUPUT#8: 07F8/38C7
INPUT#1 / OUPUT#8: 01FE/38C7	INPUT#4 / OUPUT#1: 04FB/31CE	INPUT#6 / OUPUT#1: 06F9/31CE	INPUT#8 / OUPUT#1: 08F7/31CE
INPUT#2 / OUPUT#1: 02FD/31CE	INPUT#4 / OUPUT#2: 04FB/32CD	INPUT#6 / OUPUT#2: 06F9/32CD	INPUT#8 / OUPUT#2: 08F7/32CD
INPUT#2 / OUPUT#2: 02FD/32CD	INPUT#4 / OUPUT#3: 04FB/33CC	INPUT#6 / OUPUT#3: 06F9/33CC	INPUT#8 / OUPUT#3: 08F7/33CC
INPUT#2 / OUPUT#3: 02FD/33CC	INPUT#4 / OUPUT#4: 04FB/34CB	INPUT#6 / OUPUT#4: 06F9/34CB	INPUT#8 / OUPUT#4: 08F7/34CB
INPUT#2 / OUPUT#4: 02FD/34CB	INPUT#4 / OUPUT#5: 04FB/35CA	INPUT#6 / OUPUT#5: 06F9/35CA	INPUT#8 / OUPUT#5: 08F7/35CA
INPUT#2 / OUPUT#5: 02FD/35CA	INPUT#4 / OUPUT#6: 04FB/36C9	INPUT#6 / OUPUT#6: 06F9/36C9	INPUT#8 / OUPUT#6: 08F7/36C9
INPUT#2 / OUPUT#6: 02FD/36C9	INPUT#4 / OUPUT#7: 04FB/37C8	INPUT#6 / OUPUT#7: 06F9/37C8	INPUT#8 / OUPUT#7: 08F7/37C8
INPUT#2 / OUPUT#7: 02FD/37C8	INPUT#4 / OUPUT#8: 04FB/38C7	INPUT#6 / OUPUT#8: 06F9/38C7	INPUT#8 / OUPUT#8: 08F7/38C7
INPUT#2 / OUPUT#8: 02FD/38C7			

# IR Remote Controller: IR model:SW-8188

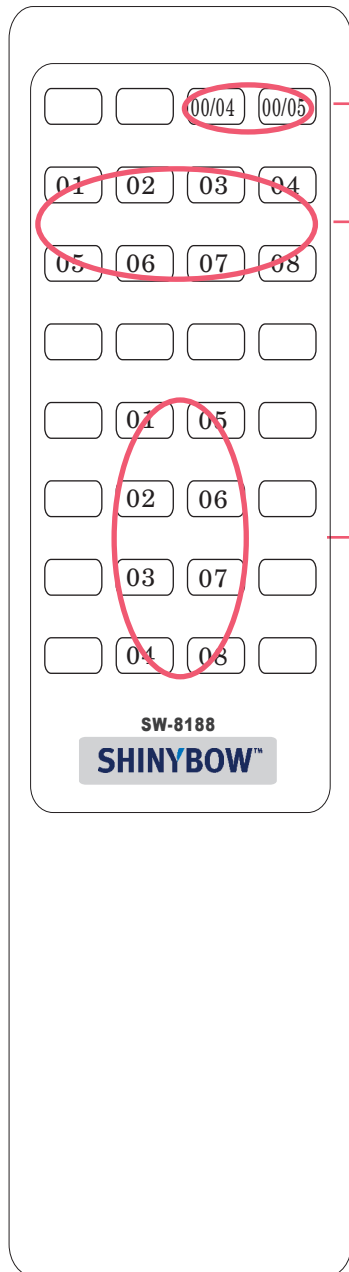

**Custom Code : 00FF**  
**Power on data code : 00FF/04FB**  
**Power off data code: 00FF/05FA**

**IR internal switching,  
 nontransmitting**

**Data code**

For Monitor-1 to be sent VGA-5

Follow these steps:

1. Press "Monitor-1" key (IR internal switch)
2. Next press "VGA-5" key and IR will transmit data code 01FE/35CA

Press "VGA-6" key and IR will transmit data code 01FE/36C9

Press "VGA-7" key and IR will transmit data code 01FE/37C8

Press "VGA-8" key and IR will transmit data code 01FE/38C7

For Monitor-3 to be sent AV-1

Follow these steps:


1. Press "VGA-3" key (IR internal switch)
2. Next press "VGA-1" key and IR will transmit data code 03FC/31CE

Press "VGA-2" key and IR will transmit data code 03FC/32CD

Press "VGA-3" key and IR will transmit data code 03FC/33CC

Press "VGA-4" key and IR will transmit data code 03FC/34CB

# Switable for SB-8180 and SB-8188

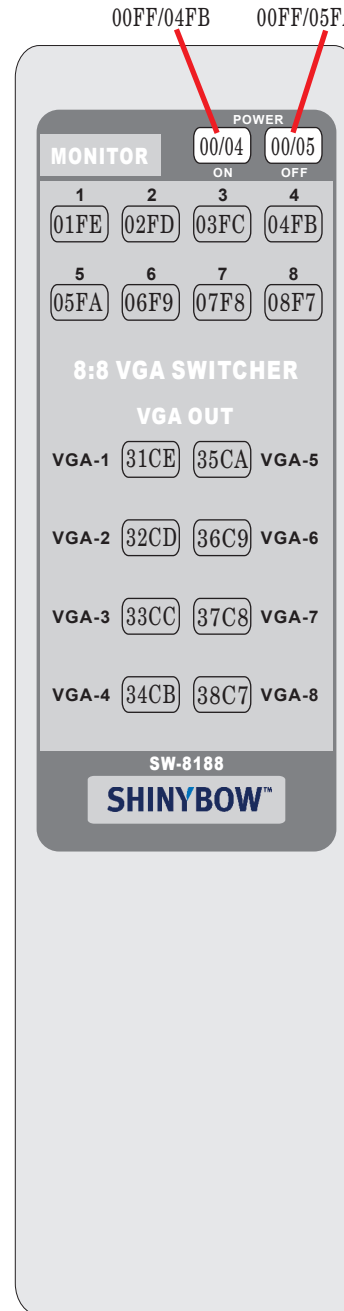

MONITOR			
		POWER	
		ON	OFF
1	2	3	4
01FE	02FD	03FC	04FB
5	6	7	8
05FA	06F9	07F8	08F7
8:8 VGA SWITCHER			
VGA OUT			
VGA-1	31CE	35CA	VGA-5
VGA-2	32CD	36C9	VGA-6
VGA-3	33CC	37C8	VGA-7
VGA-4	34CB	38C7	VGA-8