


REMOTE CONTROL

Before making any connections to the switcher. Observe the following:

- > Ensure the mains voltage supply matches the label on the supplied plug-pack (+/- 10%)
- > Ensure that the power switch is OFF
- > Ensure that all system grounds (earth) are connected to a common point.
- > Avoid powering equipment within a system from multiple power sources that may be separated by large distances
- > Connect all audio video sources and destination equipment
- > Power up all source and destination audio-visual sources
- > For each destination output select the appropriate input source by using the front panel input 1~8 select buttons. The supplied IR remote control. Or through the RS 232 serial communications port.
- > Upon power up the switcher will return to its last used setting before powered down.

REMOTE CONTROL

IR REMOTE : SW-8802

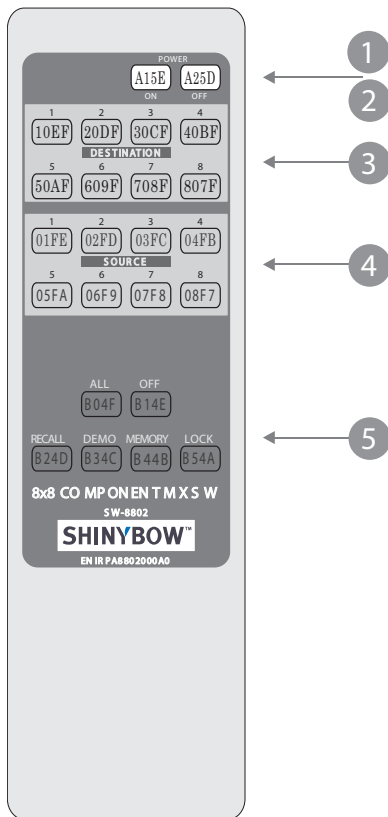

IR REMOTE CONTROL KEY :

- 1 2 SWITCH 1 POWER ON or OFF
Controller with a separate power ON and OFF
- 3 DESTINATION : 1 thru 8 OUTPUT SELECTION
Press the destination button to select the output display channel.
- 4 SOURCE : 1 thru 8 INPUT SOURCE SELECTION
Press input 1~8 sources with selection button
- 5 FUNCTION KEY
ALL - function selection button
OFF - function selection button
RECALL - function selection button
DEMO - function selection button
MEMORY - function selection button
LOCK - function selection button

REMOTE PROTOCOL COMMANDS

IR REMOTE CUSTOM AND DATA CODES (NEC Standard)

HOW TO SETUP IR CODES :

POWER ON : 04FB A15E
POWER OFF : 04FB A25D
ALL : 04FB B04F
OFF : 04FB B14E

CUSTOM CODE : 04FB

LOCK : 04FB B54A
RECALL : 04FB B24D
DEMO : 04FB B34C
MEMORY : 04FB B44B

PRESS TV DESTINATION - # / AV SOURCE -

DESTINATION #1 : 04FB 10EF

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7

DESTINATION #2 : 04FB 20DF

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7

DESTINATION #3 : 04FB 30CF

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7

DESTINATION #4 : 04FB 40BF

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7

DESTINATION #5 : 04FB 50AF

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7

DESTINATION #6 : 04FB 609F

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7

DESTINATION #7 : 04FB 708F

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7

DESTINATION #8 : 04FB 807F

SOURCE #1 : 04FB 01FE
SOURCE #2 : 04FB 02FD
SOURCE #3 : 04FB 03FC
SOURCE #4 : 04FB 04FB
SOURCE #5 : 04FB 05FA
SOURCE #6 : 04FB 06F9
SOURCE #7 : 04FB 07F8
SOURCE #8 : 04FB 08F7